

Foot Faucet®

Made By: Pressure Products - 513 N Link Lane - Fort Collins, Co. 80524 - 970-416-7351

Thank You for choosing a Foot Faucet. Please read instructions completely before starting to install the Foot Faucet. The Foot Faucet is intended to be installed by a qualified person to ensure proper water and electrical connections.


Foot Faucet Kit



Your Foot Faucet kit includes;

- 1- set of foot pedals
- 2- valves with 3/8" compression fittings
- 1- control box

Overview of Foot Faucet

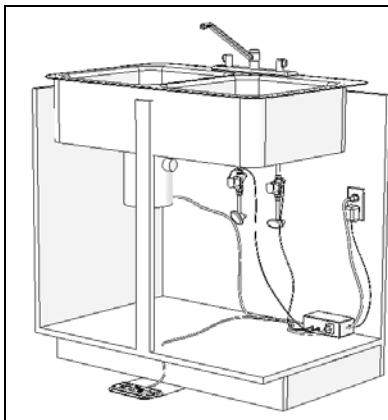

This is a picture of a typical installation of the Foot Faucet system. **TURN OFF WATER SUPPLY VALVES.** Drill a 1/4" hole in the floor of the cabinet for the control cable, then cut out a 3.25" section of each water supply tube and place the Foot Faucet valves in-line (valve must point correct direction). That's all there is to it!


The components are plugged into the control box and the water valves are turned back on.

The Foot Faucet gets power from the outlet for the garbage disposal, so in order to make the Foot Faucet work, turn on your garbage disposal wall switch then turn on the water faucets to full blast, then step on the pedals. Leave the wall switch and knobs (lever) for hot and cold water in "on" positions.


Detailed Instructions for Foot Faucet Installation

1. TURN OFF WATER SUPPLY VALVES.


2. Measure the depth of the toe space in the cabinet and drill a 1/2" hole in the floor of the cabinet just less than the toe space depth.

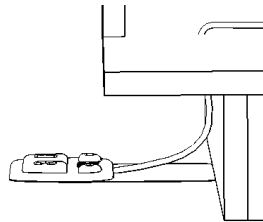


3. Cut out a 3.25" section from each water supply tube and place Foot Faucet valves in-line. Be sure valve is pointing the correct direction. The arrow on the valve should point in the direction of water flow (the end with the electrical connectors points toward the sink). If you have something other than 3/8" plastic or chromed tubing, you may have to get some adaptive fittings from your local hardware store.

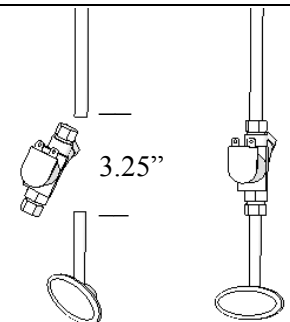

4. Connect valve electrical plugs to control box jacks, remove existing garbage disposal plug from wall outlet and plug into control box.

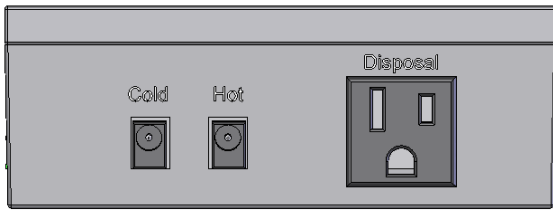


5. Connect Control Cable Plug to control box.

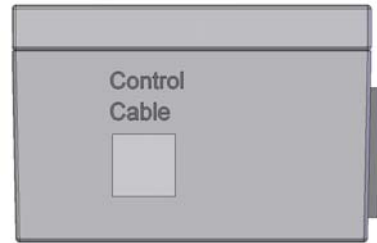

6. Plug in 12VDC transformer and AC power cord into the outlet in the sink cabinet that the garbage disposal used to be plugged into. If you do not have a garbage disposal, you can still use the water controls, although 115 VAC will have to be available for the 12 VDC transformer. The AC power cord does not need to be connected if you are just using the water controls (no garbage disposal).

7. Turn on water shut-off valves. Turn on your garbage disposal switch on wall like you want to run the garbage disposal. This sends power to the foot faucet system and it is now ready to use. Turn on hot and cold faucets to full blast and press the appropriate foot pedal.

You can trim the pad with scissors to fit the depth of your cabinet toe space, or you can put the Foot Faucet pad under a kitchen mat. The hot and cold water buttons turn on the water as long as they are held down. Pressing the Hot Latch button once will turn on the hot water and leave it on, you must tap the Hot Water button to turn the latch off.

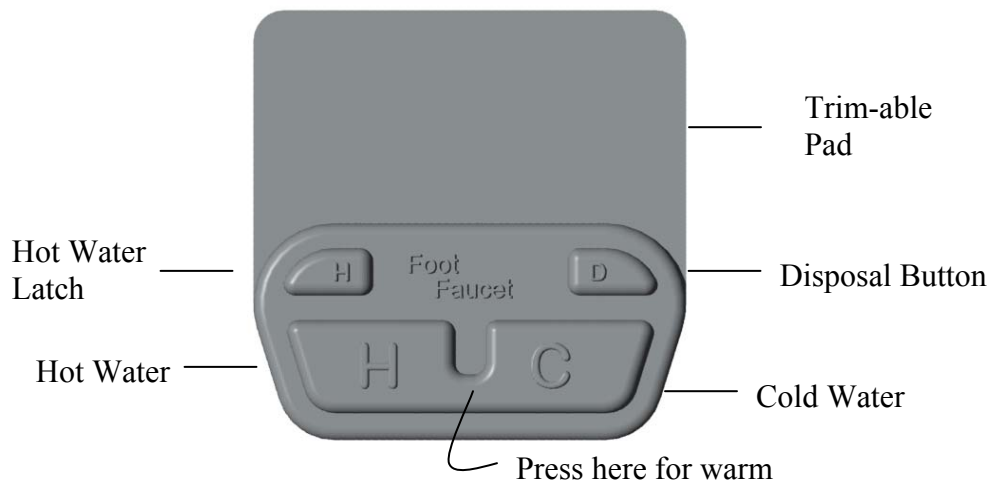

Trouble shooting – Problem	Solution
Pressing Pedals does nothing	<ol style="list-style-type: none"> 1. Turn on Garbage Disposal wall switch 2. Check that connectors are properly inserted
Hot and Cold pedals are backwards	<ol style="list-style-type: none"> 1. Switch hot and cold plug-in jacks on control box
Valve clicks but water does not come out	<ol style="list-style-type: none"> 1. Turn on water faucet handle(s) (hot and cold) to full blast. 2. Check that valves are pointing the correct direction. The arrow points toward the sink.
Everything works except the garbage disposal	<ol style="list-style-type: none"> 1. Check disposal overload breaker on disposal motor

If you have any questions or problems about the installation or operation of the Foot Faucet, please contact customer service at 1-888-729-3053.