


Foot Faucet®


Made By: Pressure Products - 9600 NCR 5 - Wellington, Co. 80549 - 970-416-7351

Thank You for choosing a Foot Faucet. Please read instructions completely before starting to install the Foot Faucet. The Foot Faucet is intended to be installed by qualified personnel to ensure proper water and electrical connections.



Foot Faucet Kit

	<p>Your Foot Faucet kit includes;</p> <ul style="list-style-type: none"> • 1- set of foot pedals • 2- valves with 3/8" compression fittings • 1- power supply • mounting hardware
--	---


Overview of Foot Faucet

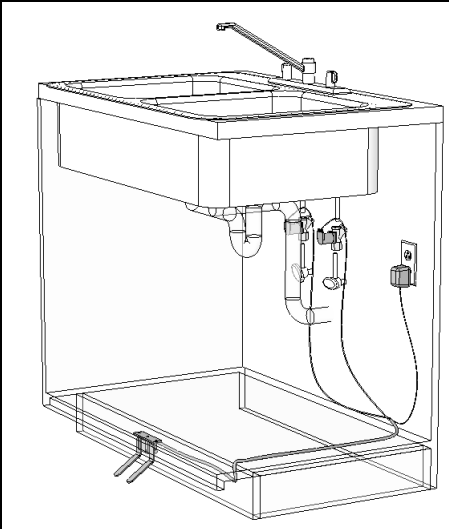	<p>This is a picture of a typical installation of the Foot Faucet system. TURN OFF WATER SUPPLY VALVES. Mount levers to underside of cabinet with supplied bolts, drill a 1/2" hole in the floor of the cabinet for the control cable, then cut out a 3.25" section of each water supply tube (or use a threaded hose fitting) and place the Foot Faucet valves in-line (valve must point correct direction). That's all there is to it!</p> <p>The components are plugged together using color coded connectors and the water valves are turned back on.</p> <p>The Foot Faucet usually gets power from the outlet for the dishwasher, after all connections are made turn on the water faucets to full blast, then push the levers. Leave the wall switch and knobs (lever) for hot and cold water in "on" positions.</p>
---	--

Detailed Instructions for Foot Faucet Installation
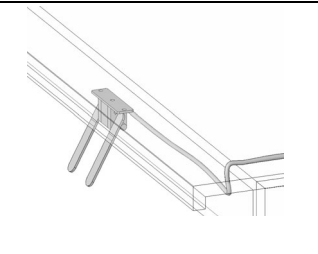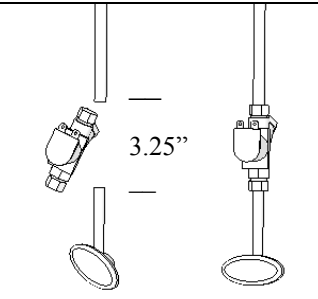
<p>1. TURN OFF WATER SUPPLY VALVES</p>	<p>2. Mount pedal assembly to the underside of the cabinet floor with included hardware. Use the template included for drilling mounting holes. Drill 1/4" holes for the bolts to mount the pedal assembly, drill a 1/2" hole in the floor of the cabinet for the cable to pass through. The hole for the cable can either be directly above the pedals or the cable can run in the toe space to the side, then through the floor of the cabinet as shown.</p>	
<p>3. There are options for this. (a) Cut out a 3.25" section from each water supply tube and place Foot Faucet valves in-line. (b) Get threaded hose with a 3/8" compression end for the Foot Faucet valve and use just the threaded part of the supplied fitting. (c) Your particular arrangement of fittings may require additional hardware. Be sure valve is pointing the correct direction. The arrow on the valve should point in the direction of water flow (the end with the electrical connectors points toward the sink).</p>	<p>(a) Cut out a 3.25" section from each water supply tube and place Foot Faucet valves in-line.</p> <p>(b) Get threaded hose with a 3/8" compression end for the Foot Faucet valve and use just the threaded part of the supplied fitting.</p> <p>(c) Your particular arrangement of fittings may require additional hardware. Be sure valve is pointing the correct direction. The arrow on the valve should point in the direction of water flow (the end with the electrical connectors points toward the sink).</p>	


4. Electrical connectors are marked with color coded tags. Push connectors together using the colors as a guide. The image below shows the connections made with corresponding colored tags.

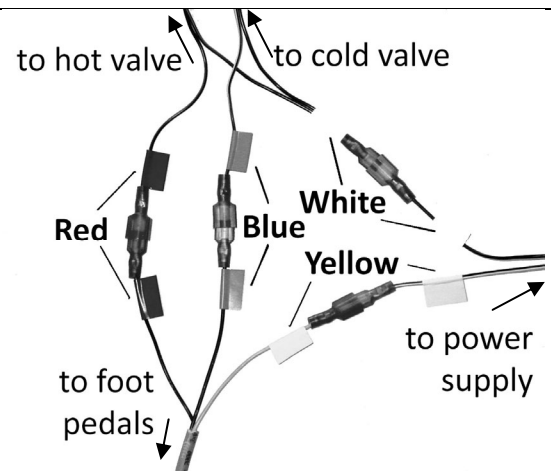


5. Plug in AC power cord into an outlet in the sink cabinet that has power all the time. The outlet that the garbage disposal plugs into only has power when the wall switch is on, you can use this outlet if you don't have a garbage disposal and you leave the wall switch on all the time.

6. Turn on water shut-off valves. Turn on hot and cold faucets to full blast and press the appropriate foot pedal.


The hot and cold pedals turn on the water as long as they are held down.

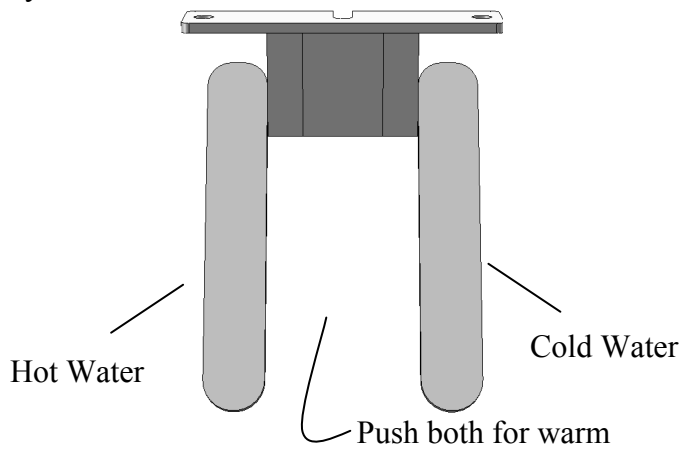

The angle of the levers can be adjusted by loosening the set screws on the hinges and re-setting them at the desired angle.

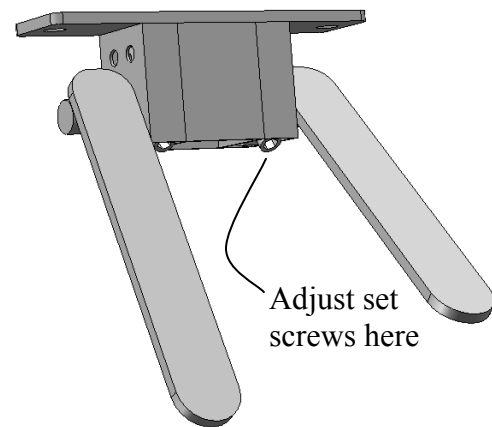

Trouble shooting – Problem	Solution
Pressing levers does nothing	<ol style="list-style-type: none"> 1. Unit is plugged into garbage disposal outlet instead of outlet that has power all the time. 2. Check that connectors are properly inserted
Hot and Cold levers are backwards	<ol style="list-style-type: none"> 1. Switch hot and cold plug-in connectors.
Valve clicks but water does not come out	<ol style="list-style-type: none"> 1. Turn on water faucet handle(s) (hot and cold) to full blast. 2. Check that valves are pointing the correct direction. The arrow points toward the sink.

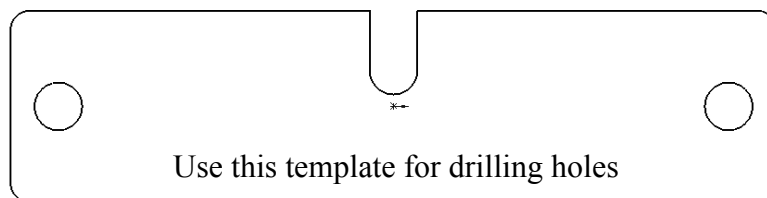

If you have any questions or problems about the installation or operation of the Foot Faucet, please contact customer service at 1-888-729-3053.